

9122 Parts List

| | |
|-----------------------------------|---------|
| BARREL COMPLETE | 001-995 |
| CENTER WHEEL & PINION | 012-A20 |
| THIRD WHEEL AND PINION | 017-A01 |
| FOURTH WHEEL AND PINION | 023-A27 |
| CANNON PINION WITH DRIVING WHEEL | 028-A22 |
| ESCAPE WHEEL AND PINION | 032-991 |
| JEWELLED PALLET FORK AND STAFF | 035-702 |
| BALANCE WITH HAIRSPRING REGULATED | 039-993 |
| CROWN WHEEL | 058-501 |
| RATCHET WHEEL | 059-802 |
| CLICK | 060-551 |
| WINDING PINION | 063-351 |
| CLUTCH WHEEL | 064-991 |
| SETTING STEM | 065-A05 |
| SETTING LEVER | 067-995 |
| YOKE | 071-995 |
| MINUTE WHEEL AND PINION | 072-999 |
| HOUR WHEEL | 075-A63 |
| SETTING WHEEL | 076-751 |
| SETTING LEVER SPRING | 077-996 |
| DIAL WASHER(1) | 078-400 |

| | |
|--|----------|
| CASING CLAMP(x2) (OPTION) | 082-060 |
| INTERMEDIATE DATE CORRECTING WHEEL | 087-A72 |
| RATCHET SLIDING WHEEL(2) | 087-A74 |
| INTERMEDIATE DATE WHEEL(1) | 087-A93 |
| INTERMEDIATE DATE WHEEL(2) | 087-A94 |
| INTERMEDIATE POWER RESERVE WHEEL(4) | 087-B01 |
| RATCHET SLIDING WHEEL(1) | 087-B08 |
| INTERMEDIATE REDUCTION WHEEL AND PINION(2) | 088-252 |
| INTERMEDIATE REDUCTION WHEEL AND PINION(3) | 088-253 |
| INTERMEDIATE REDUCTION WHEEL AND PINION(1) | 088-254 |
| CAP JEWEL MOUNTED (2) | 094-010 |
| CAP JEWEL MOUNTED (1) | 094-040 |
| SPIRAL SPRING WITH JEWEL (1) | 098-090 |
| SPIRAL SPRING WITH JEWEL (2) | 098-090 |
| MONTH DRIVING WHEEL | 103-A12 |
| 24HOUR WHEEL | 103-A13 |
| CALENDAR CORRECTOR FINGER | 106-860 |
| DATE DIAL | 108-K9XX |
| MONTH JUMPER | 109-874 |
| DATE JUMPER | 109-875 |
| INTERMEDIATE REDUCTION WHEEL AND PINION(1) SPRING-CLIP | 115-101 |
| DAY CORRECTOR LEVER | 116-993 |
| TRAIN WHEEL GUARD(AUTOMATIC) | 117-354 |

| | |
|--|-----------|
| TRAIN WHEEL GUARD(MANUAL- WINDING) | 117-361 |
| OSCILLATING WEIGHT | 119-A68 |
| INTERMEDIATE REDUCTION WHEEL AND PINION(4) | 138-251 |
| REVERSING WHEEL | 141-251 |
| DAY WHEEL | 200-156 |
| DAY JUMPER | 209-251 |
| CALENDAR CORRECTOR WHEEL | 213-616 |
| OPERATING LEVER | 257-152 |
| MONTH CORRECTOR LEVER | 265-202 |
| BREAKELEVER FOR SECOND HAND | 269-402 |
| DATE DIAL GUARD | 293-A18 |
| MONTH WHEEL | 294-807 |
| MOVEMENT HOLDER (PLASTIC) | 500-00245 |
| BARREL AND TRAIN WHEEL BRIDGE | 701-J09 |
| CENTER WHEEL BRIDGE | 702-201 |
| UPPER PLATE FOR CALENDER | 703-114 |
| PALLET BRIDGE | 708-091 |
| BALANCE BRIDGE | 710-204 |
| CALENDAR PLATFORM | 713-160 |
| LOWER PLATE FOR CALENDER | 719-056 |
| LOWER PLATE FOR BARREL COMPLETE | 719-058 |
| CLICK SPRING | 903-A15 |
| CALENDAR CORRECTOR WHEEL SPRING | 903-A18 |

| | |
|---|---------|
| CALENDAR CORRECTOR WHEEL SPRING | 903-A18 |
| MONTH CORRECTOR SPRING | 903-A19 |
| SETTING LEVER PIN | 906-A12 |
| SCREW FOR CLICK | 922-820 |
| SCREW FOR CLICK SPRING | 922-820 |
| SCREW FOR PALLET BRIDGE(x2) | 922-820 |
| SCREW FOR LOWER PLATE FOR BARREL COMPLETE (x2) | 922-940 |
| SCREW FOR SETTING LEVER JUMPER (x2) | 923-630 |
| SCREW FOR BALANCE BRIDGE | 923-998 |
| SCREW FOR BARREL AND TRAIN WHEEL BRIDGE (x5) | 923-998 |
| SCREW FOR CENTER WHEEL BRIDGE | 923-998 |
| SCREW FOR LOWER PLATE FOR CALENDER (x2) | 923-998 |
| SCREW FOR UPPER PLATE FOR CALENDER (x4) | 923-998 |
| SCREW FOR OSCILLATING WEIGHT(x3) | 923-999 |
| SCREW FOR CASING CLAMP(x2) (OPTION) | 924-752 |
| SCREW FOR STUD | 927-020 |
| SCREW FOR CALENDAR PLATFORM | 929-700 |
| SCREW FOR DATE DIAL GUARD | 929-700 |
| SCREW FOR TRAIN WHEEL GUARD(AUTOMATIC)(x2) | 930-701 |
| SCREW FOR TRAIN WHEEL GUARD(MANUAL- WINDING)(x3) | 930-701 |
| SCREW FOR DATE DIAL GUARD (x4) | 930-702 |
| ** LONGER SETTING STEM(24.0MM) ** | 065-A25 |