 

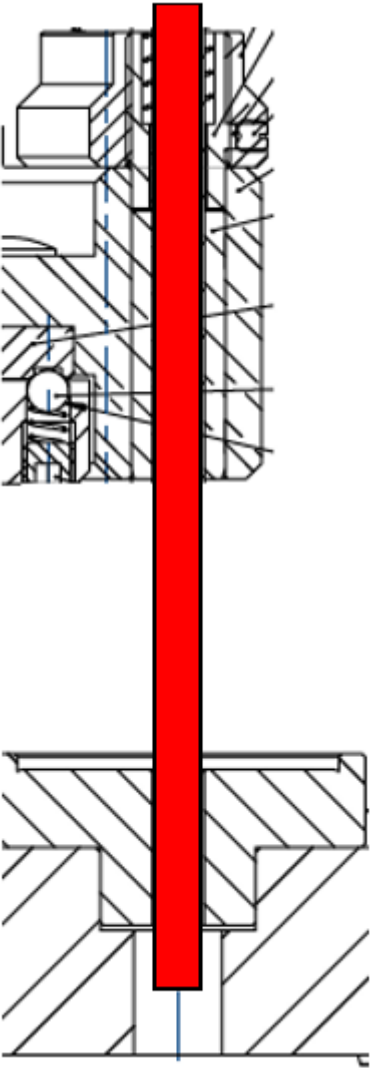


N°	Description	Illustration
1	Unscrew the plastic cleats	
2	Take out the pins	
3	<p>Position the upper part of the stem. Engage the check pin in the spindle housing. Repeat the check for all positions. The control pin should engage freely in the base slot.</p>	
4	If the control pin engages in all positions, the problem is not with the stem.	
5	If the axis does not engage, the stem has received a shock. In this case , the unit must be	

| returned to us. |