




Escapement doesn't fit

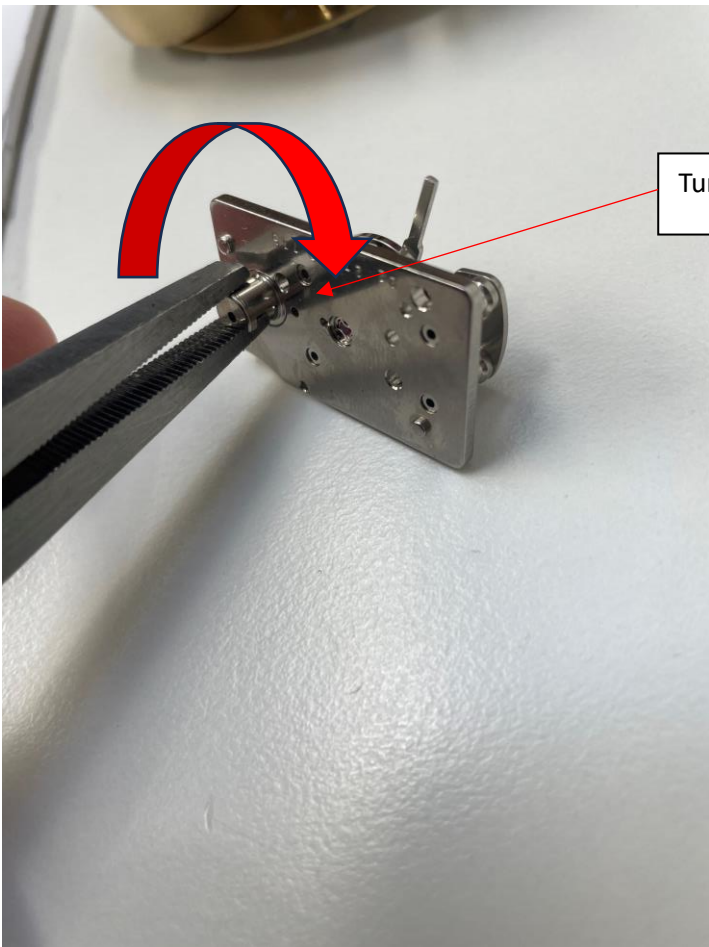


Turn the Barrel with pliers

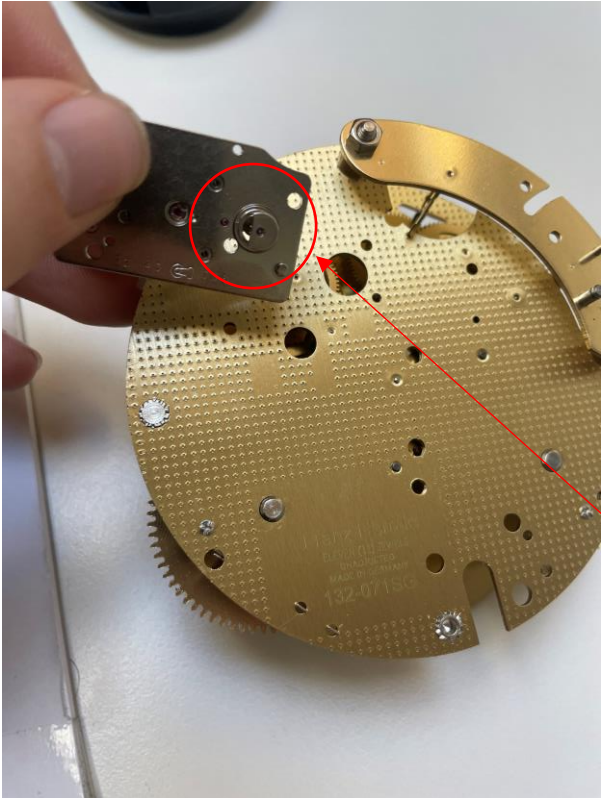

Barrel is in the right position

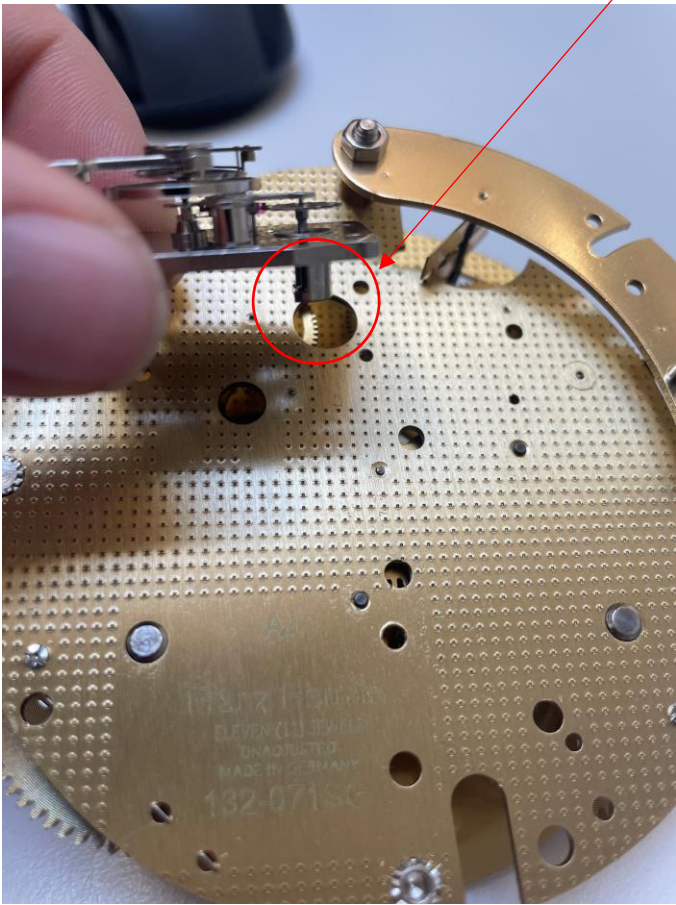

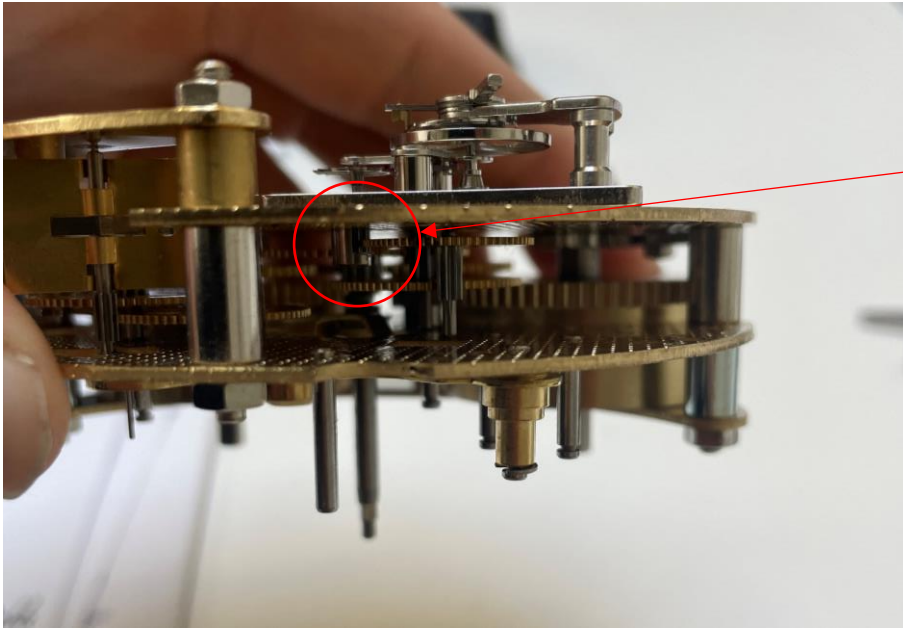

Escapement fits now

